


## POCKET HOLE CORNER CABINET

Copyright © 2014 JaysCustomCreations.com

### Shopping List


Item	Quantity	Description
36" x 36" x 3/8" plywood	1	For the backs
1 x 6 x 8'	1	For the face frame
16-1/2" x 50" x 3/4" plywood	1	For the shelves. You may not need this much.
Brad nails	handful	
wood glue		

Drill pocket holes for 1-1/4" pocket hole screws as indicated by the arrows. All of the face frame pieces are ripped from a piece of 1 x 6.

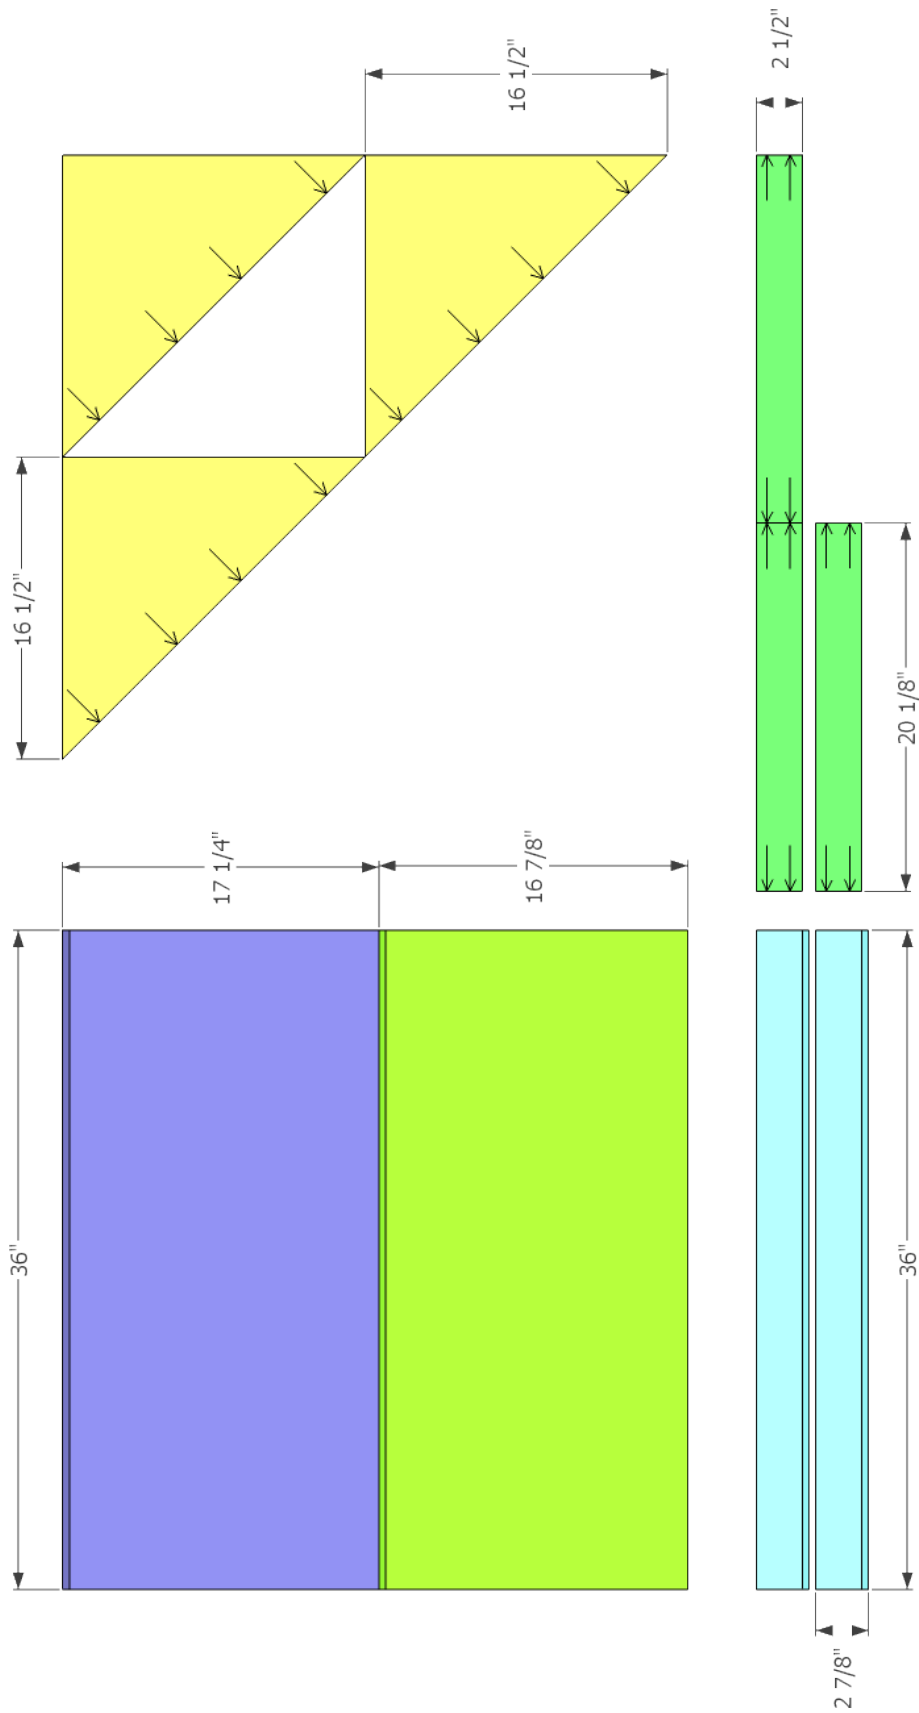


1

Assemble the faceframe with glue and 1-1/4" pocket hole screws.

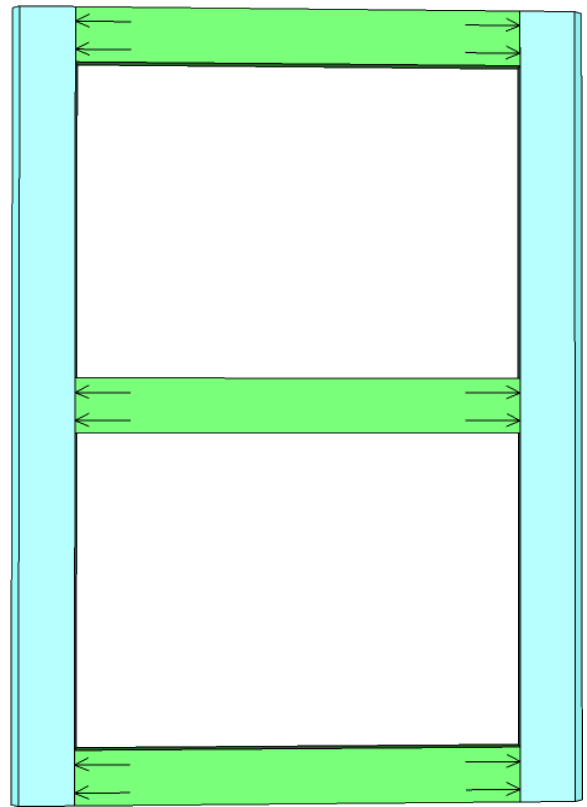



2

After the face frame is assembled cut matching 45 degree angles along the length of the side pieces.

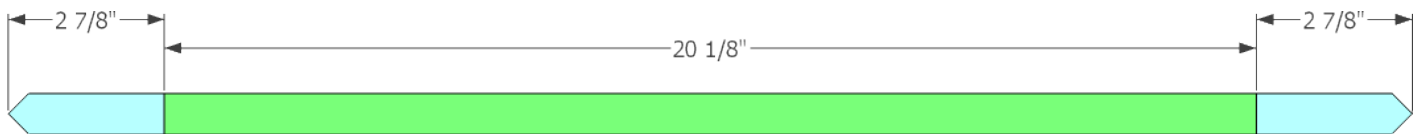

3

With the face frame laying face down attach the three shelves with 1-1/4" pocket hole screws. Make sure the shelves are centered.

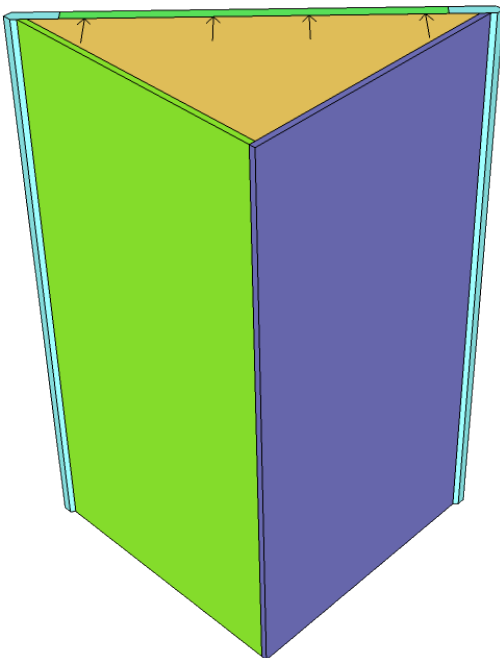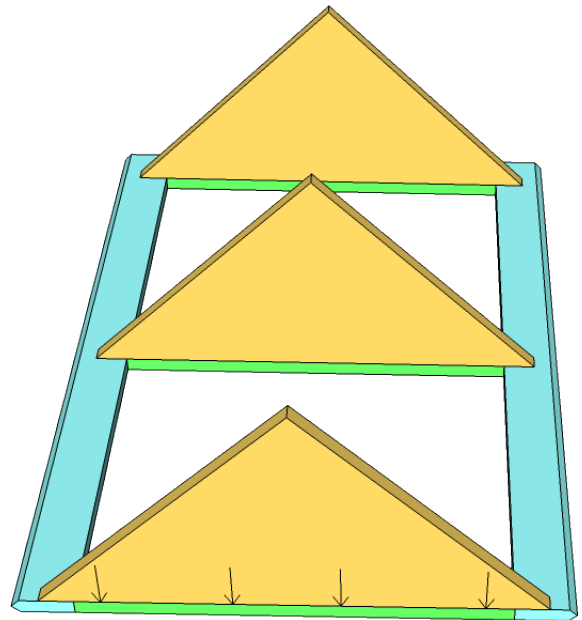

4

Rip a 45 degree bevel on one side of each of the back panels and install them onto the back of the triangular shelves with either brad nails or screws.